





MERCAPTURE™ KIT COMPONENTS

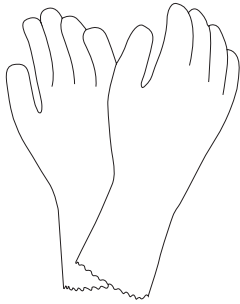


Pair of
Gloves x5




OdorXice™ Plus

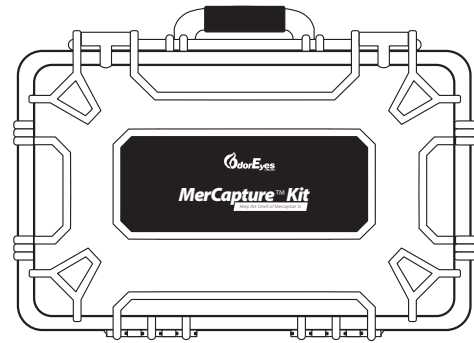


Case

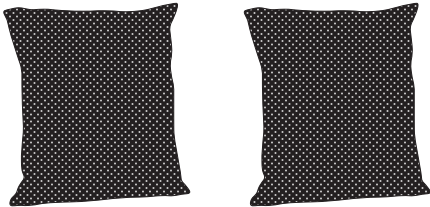

5-lb Bag of
Activated Charcoal Carbon x4

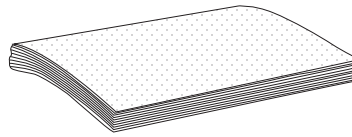

Absorbant
Pads

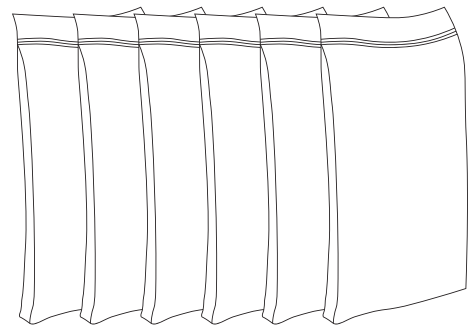


Odor Bag x6



Warning Sticker x4

MERCAPTURE™ KIT INSTRUCTIONS

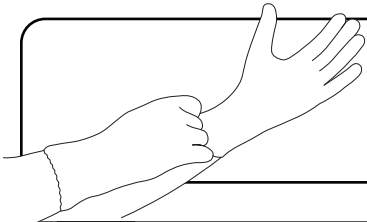


1. PROTECT

- A. Put on gloves and any other personal protective equipment (PPE) for safe handling. Welker recommends wearing safety glasses.

2. PREPARE

- A. Allow contaminated equipment to air out. Welker recommends allowing equipment to air out for at least an hour.
- B. Lay down absorbent pad.
- C. Place contaminated equipment on absorbent pad.

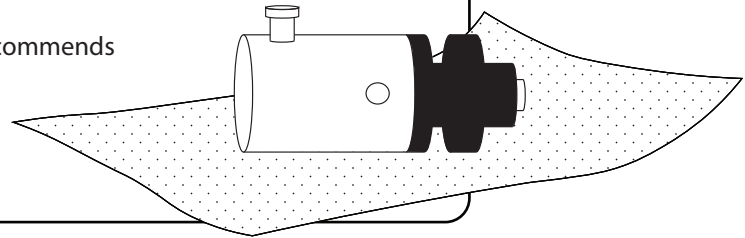


3. DEODORIZE

- A. Liberally apply OdorXice™ Plus to the outside of the contaminated equipment.
- B. Wrap the contaminated equipment in the absorbent pad. As necessary, use additional absorbent pads to fully cover the contaminated equipment.
- C. Liberally apply OdorXice™ Plus to the outside of the wrapped equipment.

4. PACKAGE

- A. Place wrapped equipment in an odor bag.
- B. For additional odor control, add activated charcoal carbon to the odor bag. Pour in loose activated charcoal carbon or fit individual bags of activated charcoal carbon around the wrapped equipment.
- C. Remove excess air from the odor bag and close it. Ensure the odor bag is properly sealed.
- D. Place warning sticker on odor bag.

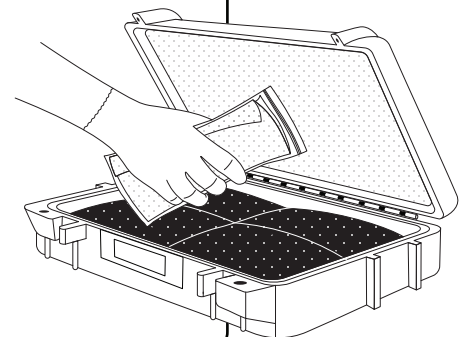

5. TRANSPORT

- A. If the case is being returned to the factory, remove any unused kit components from the case.
- B. Place sealed odor bag(s) inside the case on top of the remaining bags of activated charcoal carbon. Use case foam to support the bagged equipment and prevent shifting during transport.
- C. Close and latch the case lid.

